


WIRELESS ULTRASONIC TANK LEVEL MONITOR INSTALLATION NOTES and QUICK START GUIDE

Before beginning it is HIGHLY RECOMMENDED to know your Tank Depth and Air Gap before getting started. See diagram:

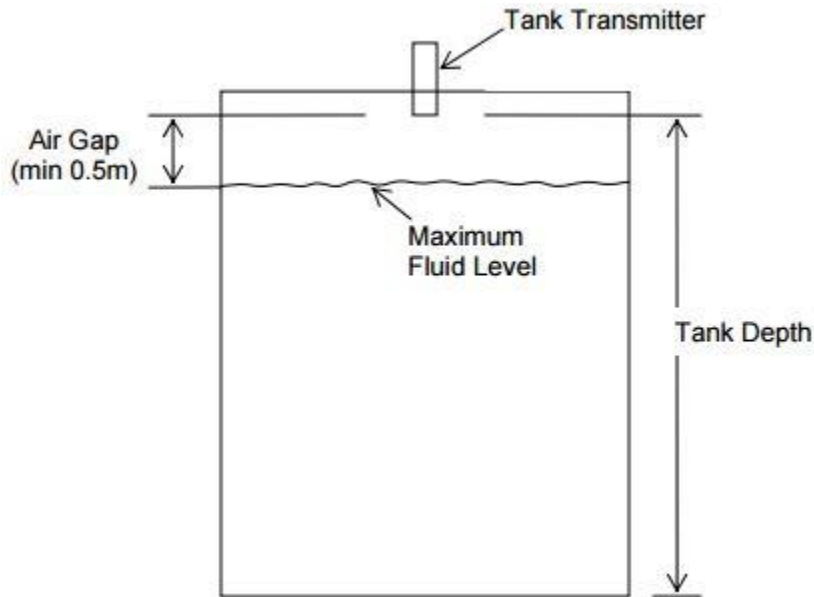

Once you know the Tank Depth and Air Gap, you should convert these units to meters. The default units for the display are in meters, so to simplify the installation of this system you are STRONGLY RECOMMENDED to enter the depths in meters. You can then easily change the units to feet later if you wish.

Note that:

To change from feet to meters, multiply the number of feet by 0.3048

To change from inches to meters, multiply the number of inches by 0.0254

Now, insert the 6 AAA batteries into the Transmitter. Then, insert the 2 AA batteries in the Display. All indicators will display, then the tank level flashes.

Press and hold the '+/max/min' button to set the tank depth (you can press the '-/tank' button if you go over the desired setting). When you have the correct setting, press 'set'.

Now, press and hold the '+/max/min' button to set the Air Gap (you can press the '-/tank' button if you go over the desired setting). When you have the correct setting, press 'set'.

You are now ready to install the Transmitter on the tank. All other settings can be accomplished later as per the included instructions.